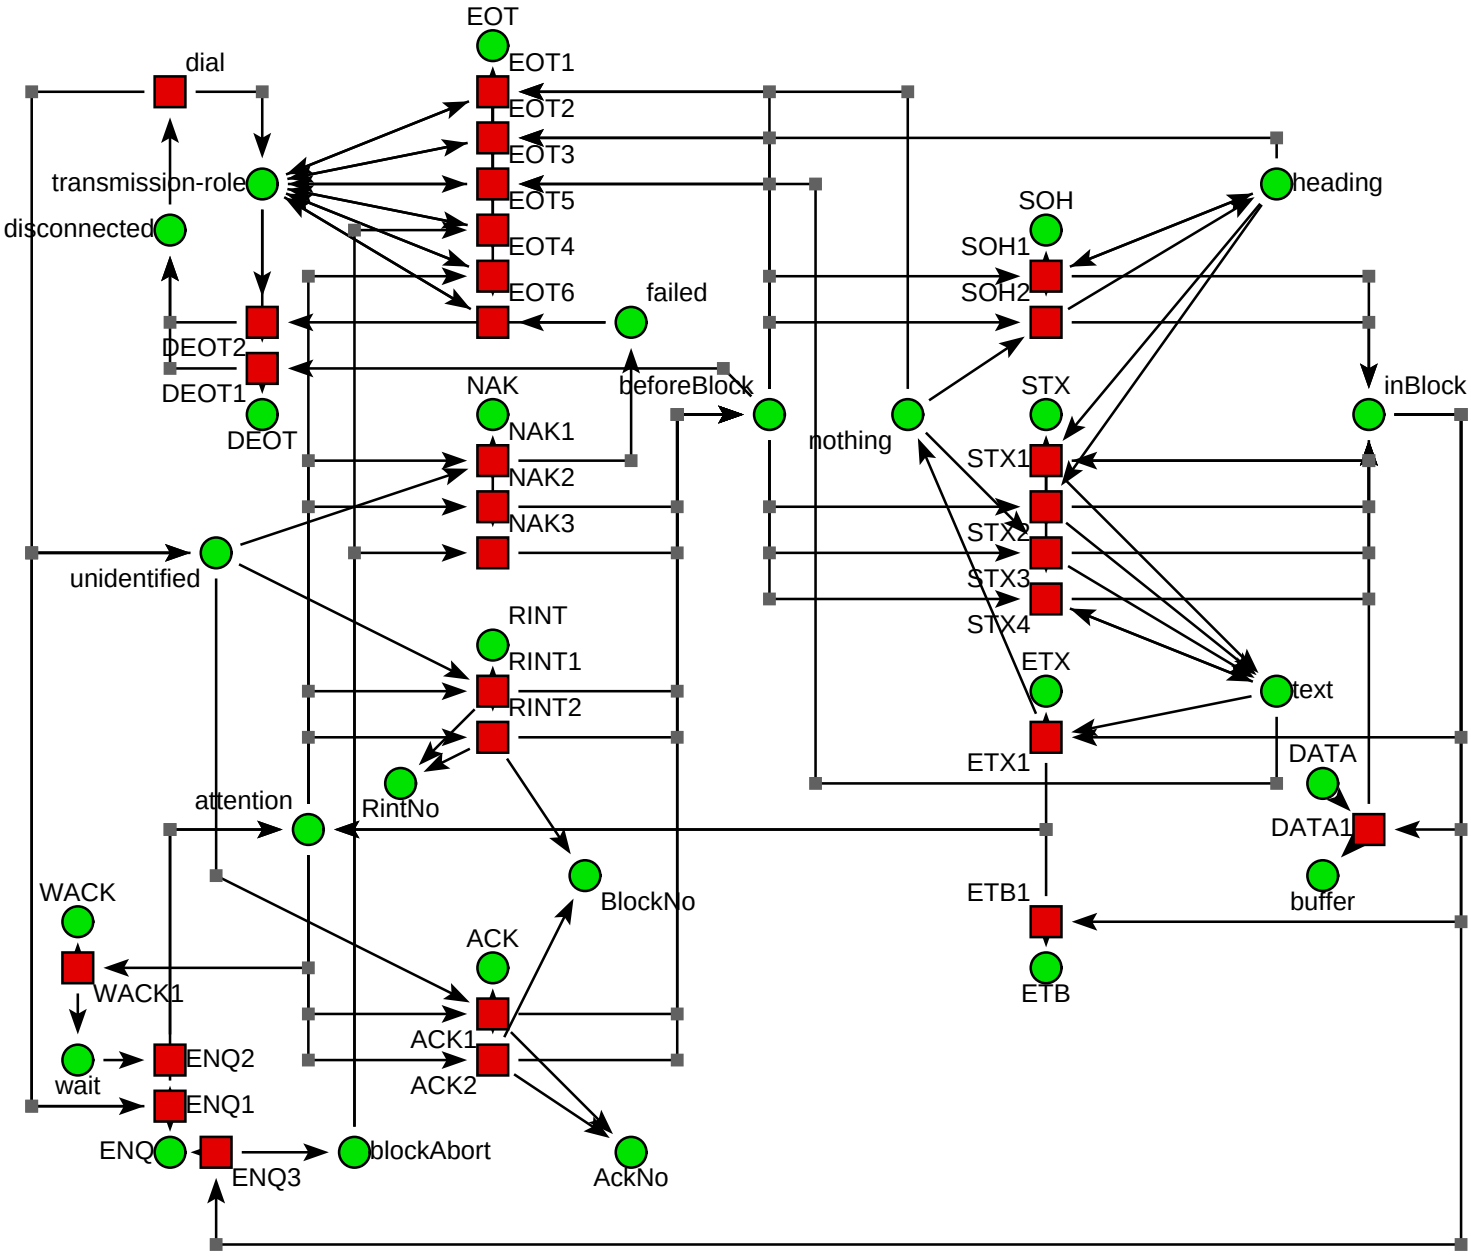
EOT
dial
EOT1
EOT2
EOT3
EOT5
EOT4
EOT6
transmission-role
disconnected
failed
DEOT2
DEOT1
DEOT
NAK
beforeBlock
NAK1
NAK2
NAK3
unidentified
RINT
RINT1
RINT2
RintNo
attention
BlockNo
WACK
WACK1
ACK
ACK1
ACK2
wait
ENQ2
ENQ1
ENQ
ENQ3
blockAbort
AckNo
SOH
SOH1
SOH2
heading
nothing
STX
STX1
STX2
STX3
STX4
inBlock
ETX
ETX1
text
DATA
DATA1
buffer
ETB1
ETB